

## Installation Instructions

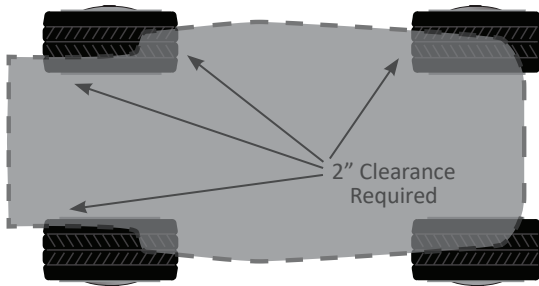


Figure 1

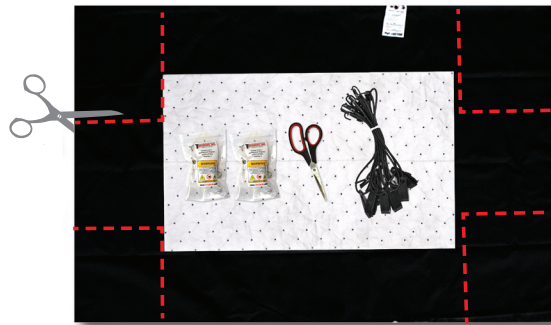


Figure 2

1. Spread the DripDiaper® out in front of machine with the absorptive pad facing UP.
  2. Drive onto DripDiaper, centering the machine, and use included scissors to notch DripDiaper edges for tire cutouts. (Ensure a minimum 2" clearance around all tires - Fig. 1)
  3. Back machine off of DripDiaper and complete cut outs for tires at notches - Fig. 2.
  4. Slide DripDiaper under machine ensuring pad faces up and tires sit in cutouts.
  5. Attach clip end of each bungee assembly to exposed outside corners of DripDiaper.
  6. Place magnets on machine near bungee assemblies and attach hook end of bungees to magnets. (Adjust magnet and clip locations as necessary for a proper fit.)
- \*\*Ensure magnet placement allows enough slack for proper operation of pot hole protectors.

**DripDiapers®**

Open Camera  
Scan Code  
Watch Install



### NOTES

- DripDiapers® are designed to ensure fluid leaks DO NOT accumulate on finished flooring. However, TireSocks, Inc. is not responsible for damage caused by fluid leaks that may still occur.
- DripDiapers® are flame-resistant, however they should be kept away from open flames.

Questions? Call Us 1.888.SOCK.911

### WARNING

The machine should always be OFF with the key removed during each step of the installation and removal of this product.